



## ***Compact Portable Shipping Scales for General Shipping Applications***

Introducing the Courier 1000 Series Shipping Scales – a versatile line of lightweight, durable weighing equipment able to handle everything from general shipping applications for businesses to light weighing jobs for veterinary offices.

### ***Unique Features:***


- Its ultra-compact ABS plastic design combines light weight and durability. Courier scales are exceptionally easy to transport thanks to their integrated handles.
- Large 20 mm high display works with Dynamic Weighing mode to store data & ensure it is easily accessible when weighing packages and is also ideal for weighing small animals in veterinary use.
- Battery powered (not included) for use in the office or shop. AC adapter power included.

# COURIER™ 1000 Shipping Scales

## Specifications

Modelo	i-C12P9	i-C12P20	i-C12P75
Capacity × Default Readability	9 kg x 0.005 kg	20 kg x 0.01 kg	75 kg x 0.05 kg
Maximum Displayed Resolution	1:2 000	1:2 200	1:1 650
Weighing Units	kg, lb		
Application Mode	Weighing, Dynamic Weighing, Weight Alert™ (only available in lb weighing mode in i-C12P75 model)		
Display	20 mm digit height, 4-digit 7-segment LCD display		
Keyboard	2 mechanical function keys		
Construction	ABS plastic housing and pan		
Stabilization Time	within 2 seconds		
Power	AC adapter (included) or 3 C (LR14) batteries (not included) Battery life: 300 hours with alkaline cells with auto off after 4 minutes of inactivity		
Operating Temperature Range	5 °C to 40 °C		
Safe Overload Capacity	150% of capacity		
Platform Dimensions (L x W x H)	280 x 316 x 60 mm		
Net Weight	1.5 kg		
Shipping Weight	2 kg		
Shipping Dimensions	395 x 385 x 155 mm		

## Outline Dimensions

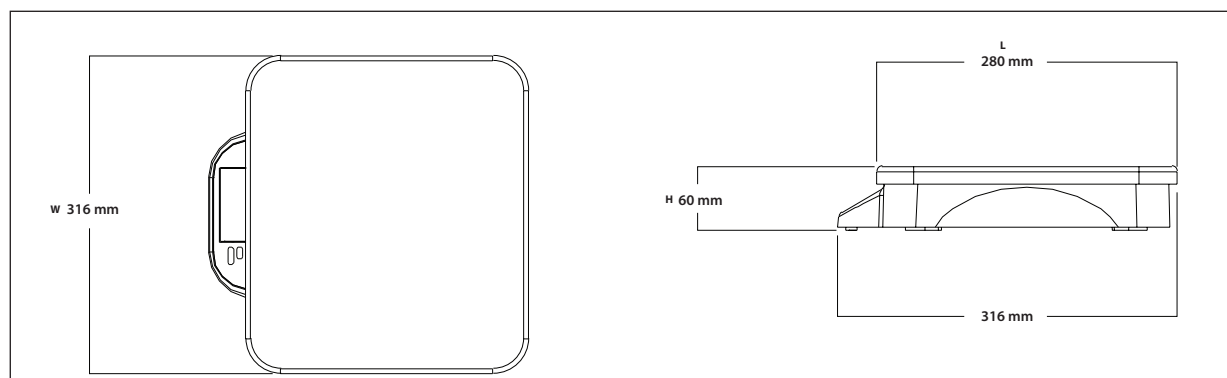

## Other Features and Equipment

ABS housing and platform, stainless steel platform (accessory sold separately)

## Compliance

- **Product Safety:** IEC/EN 61010-1; UL certified power supply
- **Electromagnetic Compatibility:** IEC/EN 61326-1 Class B, basic environments; FCC Part 15 Class A;  
Canada ICES-003 Class A
- **Compliance Marks:** CE, UKCA
- **Other:** WEEE, RoHS

## Accessories

Stainless Steel Weighing Pan ..... 80251248

OHAUS Europe GmbH

e-mail: [ssc@ohaus.com](mailto:ssc@ohaus.com)

Tel: 0041 22 567 53 19

e-mail: [tsc@ohaus.com](mailto:tsc@ohaus.com)

Tel: 0041 22 567 53 20

[www.ohaus.com](http://www.ohaus.com)

The management system governing the manufacture of this product is ISO 9001:2015 certified.

